


**OVEN PARTS**For Models:KEBS177SBL00, KEBS177SWH00, KEBS177SS00 (Black) (White) (Stainless)

Illus	. Part		Illus	. Part		IIIus	. Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1		Literature Parts	9		Tube, Vent	24	4449748	
		Installation	10 11		Lens, Light Oven Light	25		Side, Chassis
	8304336	Instructions	''	4440312	Assembly	26 27	0304304	Back, Chassis Liner, Oven
		Undercounter	12	4452164	Bulb, Light	21		(Not serviceable)
		Use & Care Guide	13		Screw (2)	28	8304452	Thermal Fuse 105C
	0304324	Tech Sheet	14		Frame, Front	29	4455636	
	8303951		15		Gasket, Door	31		Base, Chassis
	8304415		16	3196176		32		Retainer, Gasket
	8304335	Easy Set Guide	17	4449040	Screw	33		Cover, Back
		Safer Cooking Tips	18	4449154		34		Trim, Bottom Vent
	3191638		19	4451477			8303706BL	
	9759133	French	21		Mounting Rail, Side		8303706WH	
					Right		8303706SS	
2	8304420	Bracket, Base		8303675BL		35	4448444	Grommet, Mounting
3		Hinge Receiver		8303675WH			0.400000	Rail
	4455606			000007001	Left	36	3400893	Screw (12)
	4455605			8303676BL 8303676WH		l ——	<b>EQ. 1.6</b> 14	//NO DADTO
4		Bumper, Door (2)	22		Latch, Mortorized			VING PARTS
5		Exhaust, Vent Slope	22 23	4449743			NOT ILL	USTRATED
6 7	8303771	Divider, Vent Top Chassis	23	4443743	Ociew			
8	4449809							
O	4443003	Ociew				INS	ULATION	
								Insulation, Wrap
			l			I	8303968	Insulation, Back

# **CONTROL PANEL PARTS**


For Models:KEBS177SBL00, KEBS177SWH00, KEBS177SSS00 (Black) (White) (Stainless)

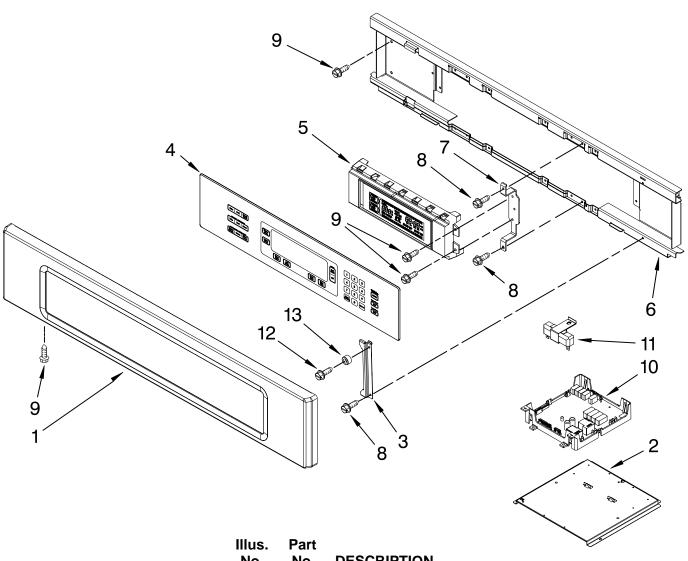

NO.	NO.	DESCRIPTION
1	000074701	Panel, Control
	8303717BL	
	8303717WH	
_	8303717SS	
2	8303687	
		Manager
3	8303797	Bracket, Control
		Panel
4	8303879	Keyboard, Glass
		Touch
5	W10118733	User Inferface
6	8303720	Backer, Control
7	8303887	Bracket,
		Enclosure (2)
8	4449154	Screw
9	3400832	Screw
10	W10119143	Appliance Manager
11	8304441	Resistor, Drop
12	4449809	
13	9760749	Bumper
13	3100143	Dumper


# **OVEN DOOR PARTS**


For Models:KEBS177SBL00, KEBS177SWH00, KEBS177SSS00 (Black) (White) (Stainless)

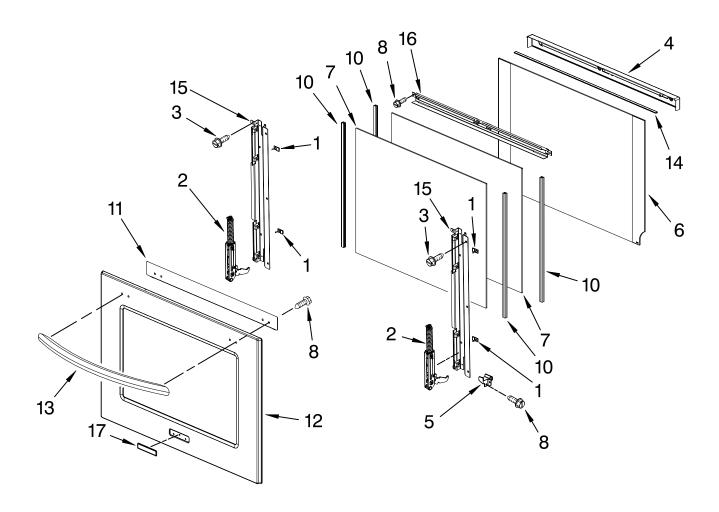

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus   No.		DESCRIPTION
1	8304522	Bumper, Door	10	8304523	Seal	13		Door Handle
2	8303990	Hinge, Door (2)	11	8304361BL	Bracket, Handle		8303775BL	Black
3	3196183		12		Door Glass,		8303775WH	White
4	8304580BL	Vent, Door Top			Assembly		8303775SS	Stainless
5		Bracket, Door			Includes #17	14	8304525	Seal
	8304377	Right		8304001	Black	15	8303745BL	Frame, Door Side(2)
	8304378	•		8304003	White	16		Door, Top Bracket
6	8303738BL	Door Liner		8303999	Stainless	17		Badge
7	8303732	Glass, Inner					8304603BL	Black
8	4449743						8304603WH	White
Ū							8304603SS	


INTERNAL OVEN PARTS
For Models:KEBS177SBL00, KEBS177SWH00, KEBS177SSS00
(Black) (White) (Stainless)

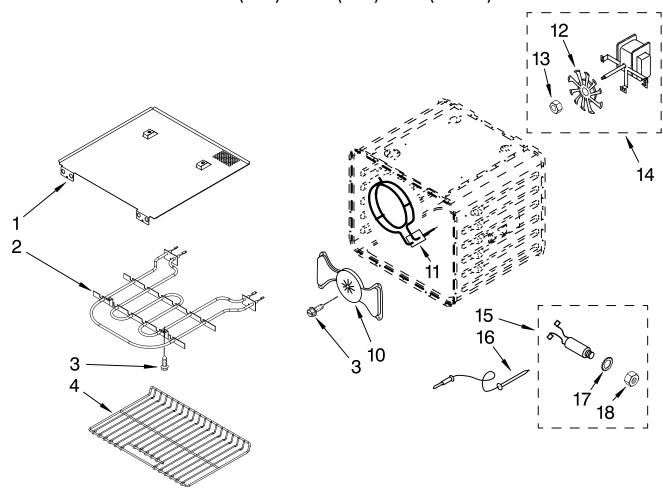

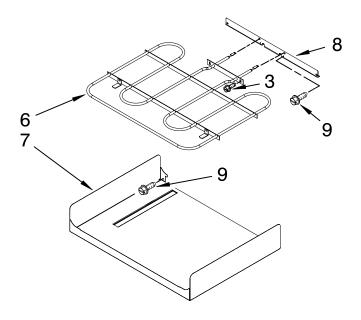

Illus. No.	. Part No.	DESCRIPTION
140.	NO.	DESCRIPTION
1	8304586	Element, Broil Shield
2	9760774	Element, Broil
3	4449154	Screw
4	8303842	Rack, Oven
6	9760768	Element, Bake
7	4455036	Tray, Bake
8	4450039	Cover, Bake Tray
9	4449809	Screw
10	8304422BU	Cover, Fan
11	9760769	Element
		Convection
12	4452226	Blade, Fan
13	4452227	Nut
14	4451583	Fan, Convection
15	9755543	Jack, Meat Probe
16	9755542	Probe, Meat
17	9755547	Washer, Lock
18	9755546	Nut, Hidden

TOP VENTING PARTS
For Models: KEBS177SBL00, KEBS177SWH00, KEBS177SSS00 (Black) (White) (Stainless)

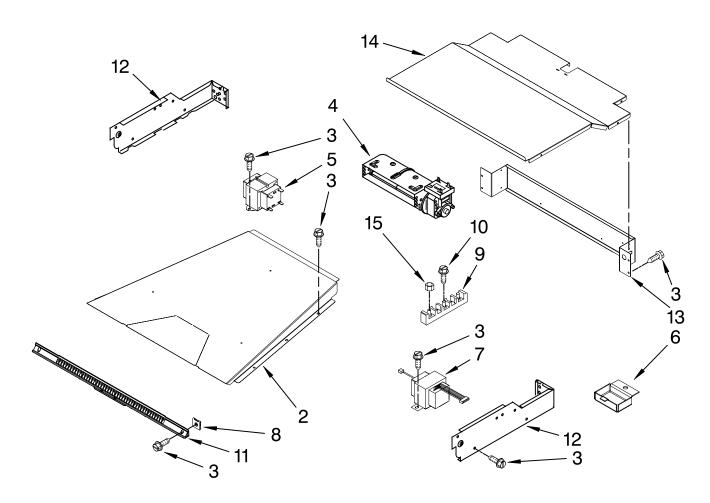

Illus. No.	Part No.	DESCRIPTION
2	8303514	Duct, Air Outlet
3	4449809	,
4	8303972	Blower, 60mm
5		Transformer, Lights
6	8285593	Connector, Cover
7		Transformr, Control
8	4450118	Nut
9	4449868	Block, Terminal
10	3400080	
11	8303722	Vent, Control
		Panel
12		Side, Control Top
	8303518	Right
	8304255	
13	8303520	Back, Control
14	8304220	Cover, Top
15	112432	Nut (3)

# OPTIONAL PARTS (NOT INCLUDED) For Models: KEBS177SBL00, KEBS177SWH00, KEBS177SSS00

(Black) (White) (Stainless)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
	No.   DESCRIPTION	

8186953 7